



FITTING INSTRUCTIONS

(802500) ALTITUDE ROOF TOP TENT 559PH016 CONTROLLER REPLACEMENT



WARNING

NOTE THE FOLLOWING:

- ◆ Please read all instructions carefully prior to installation, and comply with the instructions.
- ◆ If in any doubt, please contact your nearest ARB state office or the stockist from whom it was purchased.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques.
- ◆ It is recommended that this product is only installed by trained personnel.
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components (including but not exclusive of vehicle aerials, Tailgate spoilers, protrusions etc.)
- ◆ Work safely at all times
- ◆ Unless otherwise instructed, tighten all fasteners to specified torque
- ◆ Check bolt torque after 500km & at regular service intervals
- ◆ These instructions are correct as at the time of publication

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137

Australian enquiries
North & South American enquiries
Other international enquiries

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

www.arb.com.au

!! IMPORTANT !! other than specifically specified in this instruction

REQUIRED BOLT TORQUES:

M8=22Nm

Bolt torques must be adhered to avoid warranty issues and should be checked at vehicle service intervals.

BEFORE STARTING, READ ALL STEPS OF THE INSTRUCTIONS CAREFULLY AND CHECK ALL PARTS

FITTING KIT – CONTENTS:

Part No	Picture	Qty	Description
559PH016		1	CONTROLLER ASSY – RTT

CONTROL		1.1) Remove the Bag from the wall, unzip and lay it out flat. 1.2) Unplug the Controller from all connectors and remove. 1.3) Using the diagrams, plug all the connectors back in and test to make sure they are working correctly.
ACTUATORS 2x this connector		1.4) Lay out wiring neatly and flat, zip up bag and return to the Velcro patch.
POWER		1.5) Once complete, connect 12v power to the Anderson Plug and lower the tent by holding the "DOWN" button until the tent is fully closed. Note there will be a 10 second delay before the tent starts to close.
		1.6) Once closed, release the "DOWN" button and re-press for 10 seconds. This will reset the control system for use. 1.7) Trial by opening and closing tent as per User Manual.