
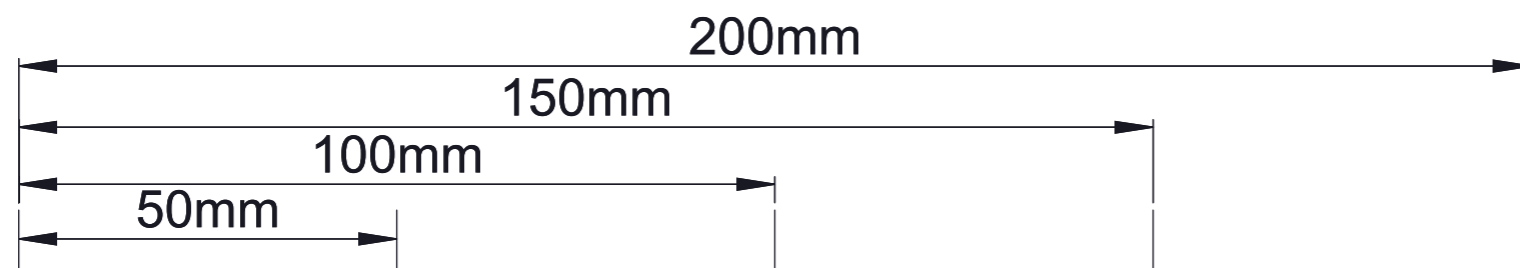



ISUZU D-MAX BLADE - MY25 ONWARDS

SNORKEL KITS: SS177HF & SS177HP

**Print A3 at 100% Scale**

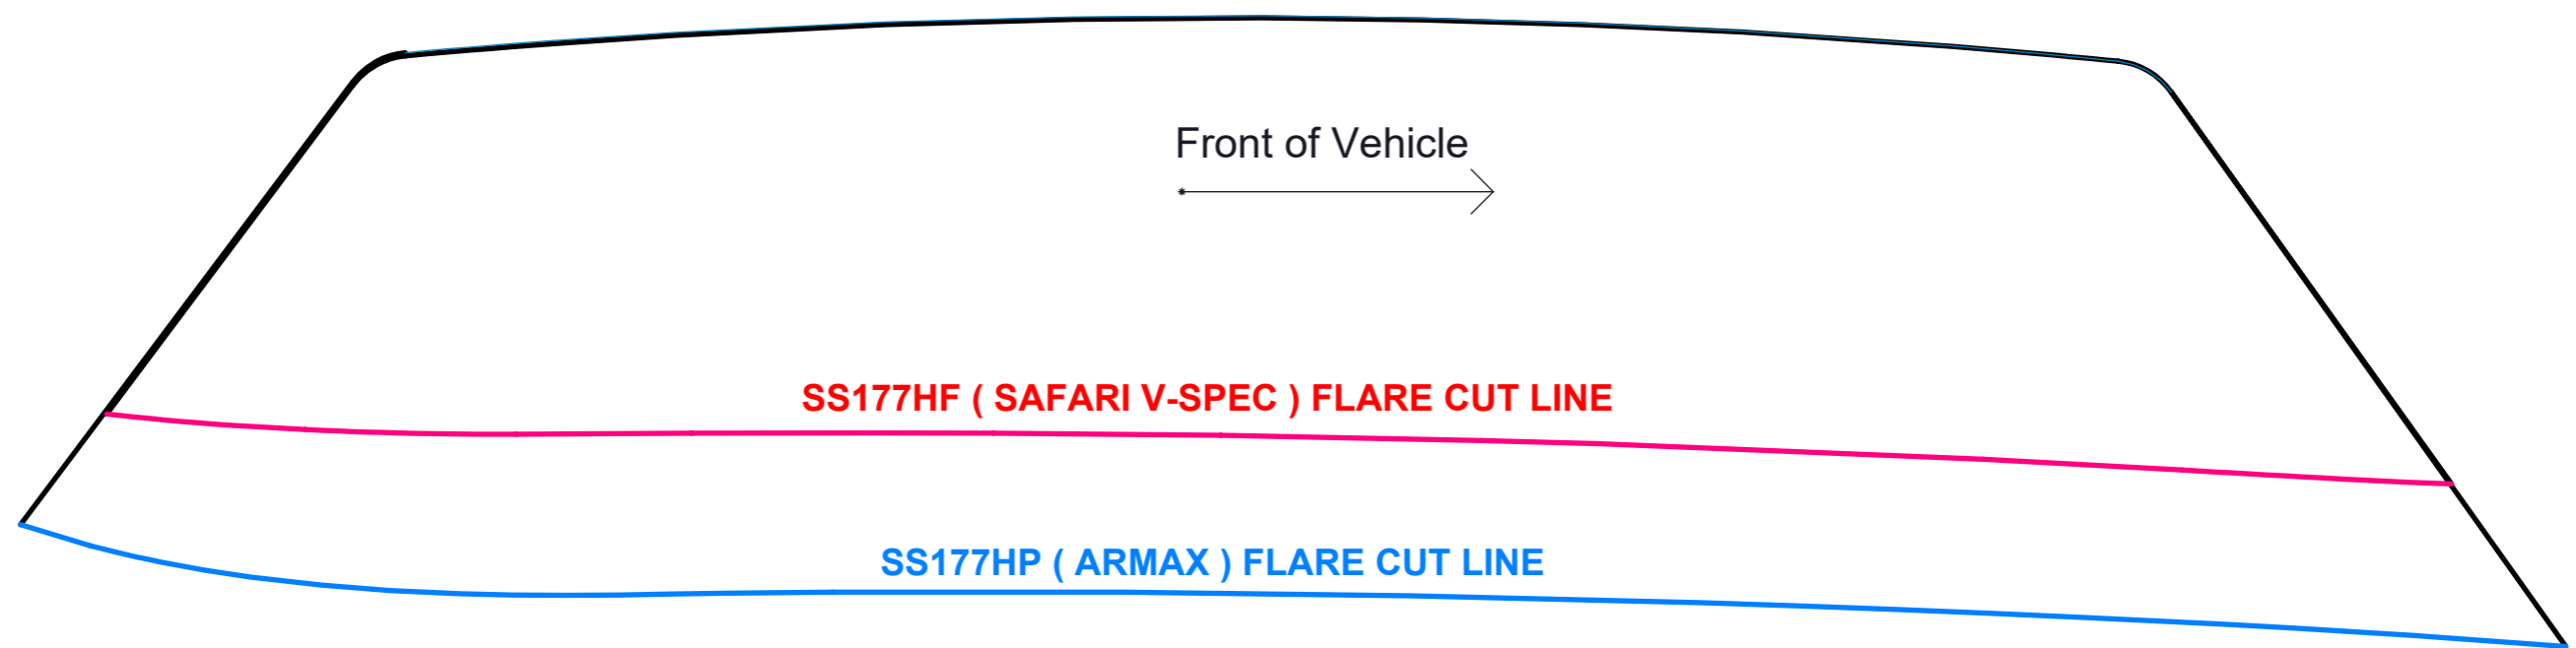

## SS177HP (ARMAX)

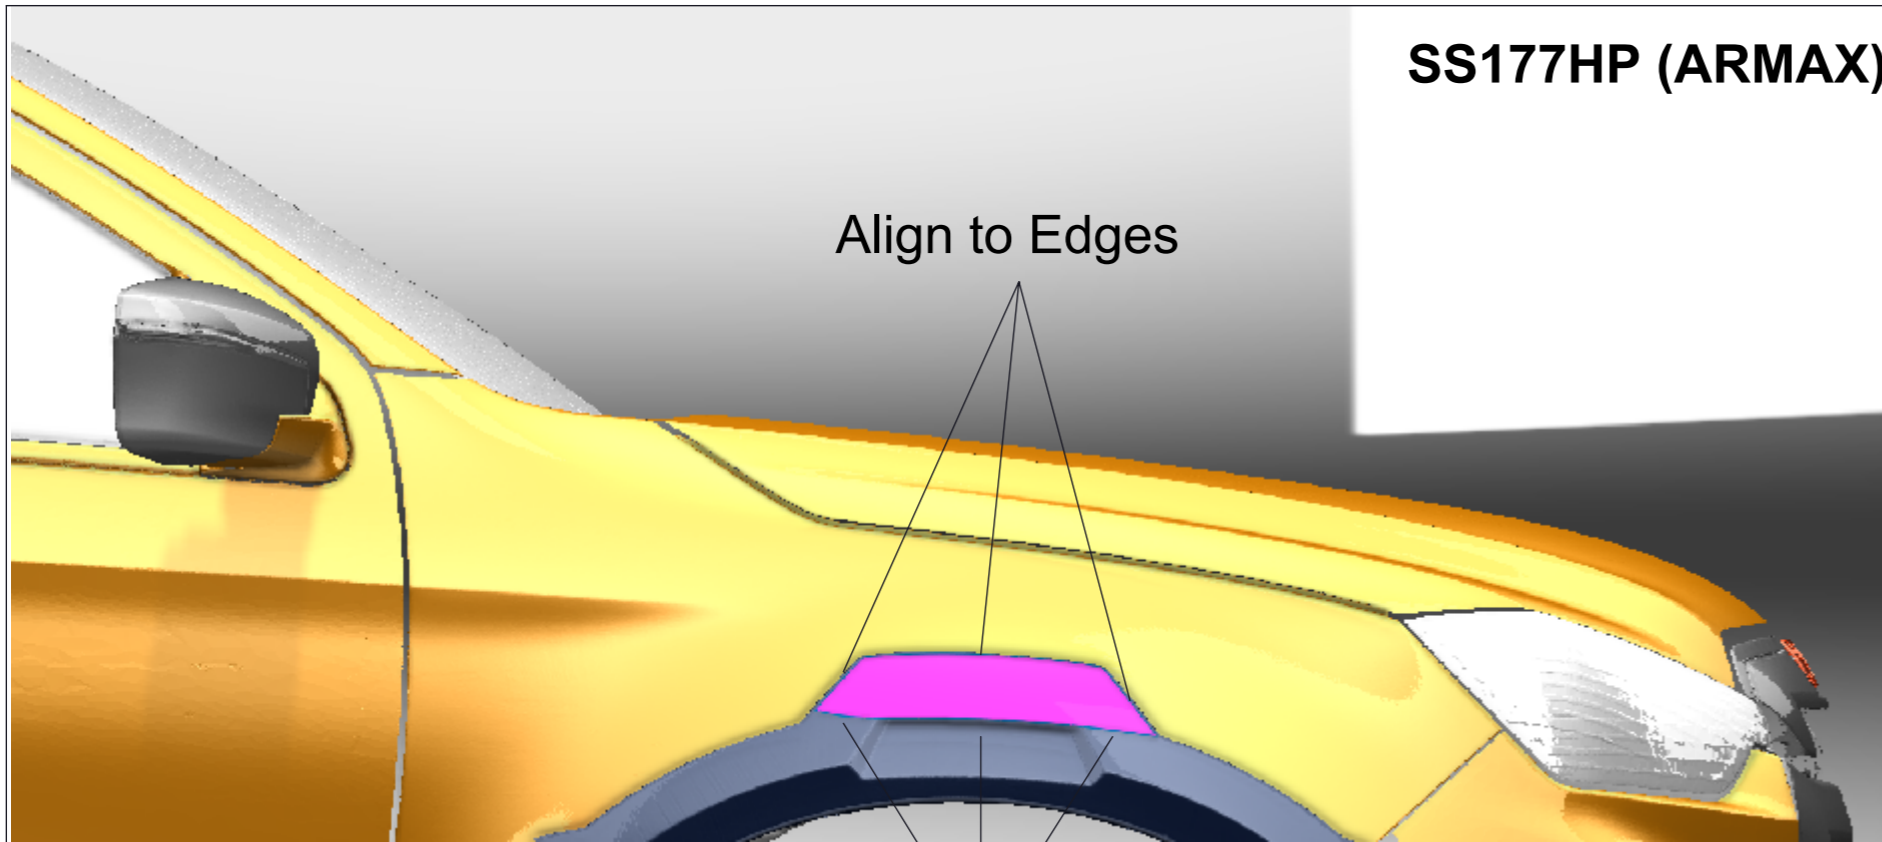

Align to Edges


Mark Lower Profile for Cutting

### TEMPLATE FITMENT

1. Print and cut out template from Page 1.
2. Trim to either V-SPEC OR ARMAX Cut Lines according to your Snorkel Model.
3. Align Template to D-MAX BLADE Flare, as indicated in images.
4. Mark Cut Line with marker pen.
5. Cut off portion of Flare, as required.

NOTE: Safari recommends removal of flare from fender panel prior to cutting.

## SS177HF (SAFARI V-SPEC)

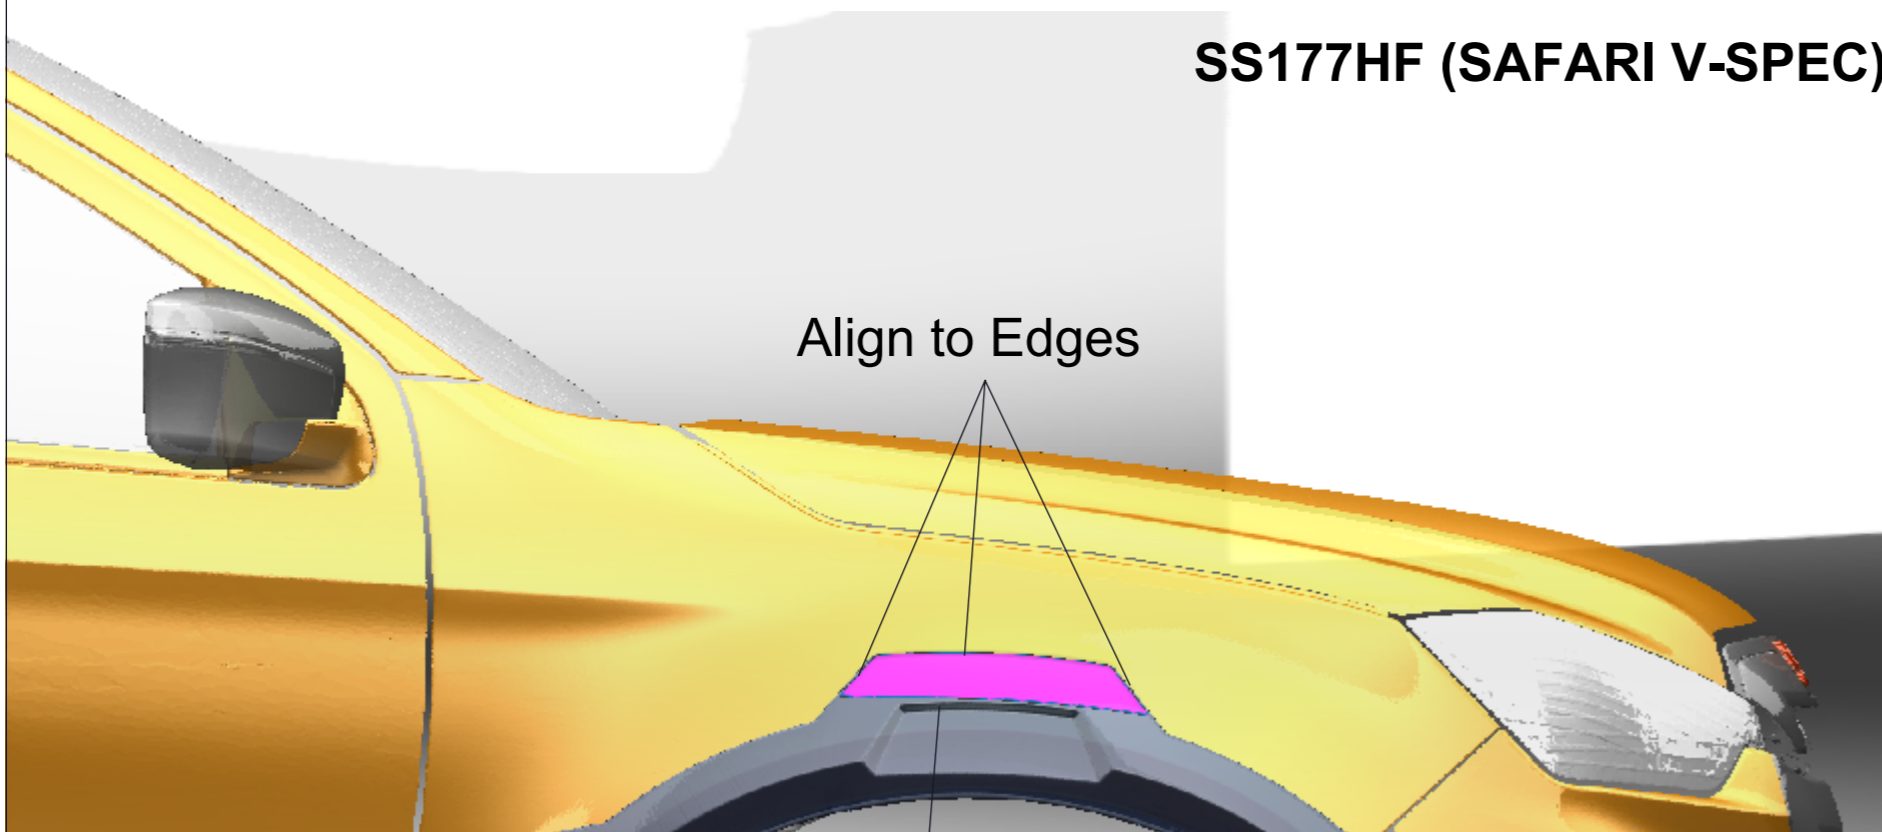

Align to Edges

Mark Lower Profile for Cutting